 




# ***FoodFlinger*** **Pond Feeder**

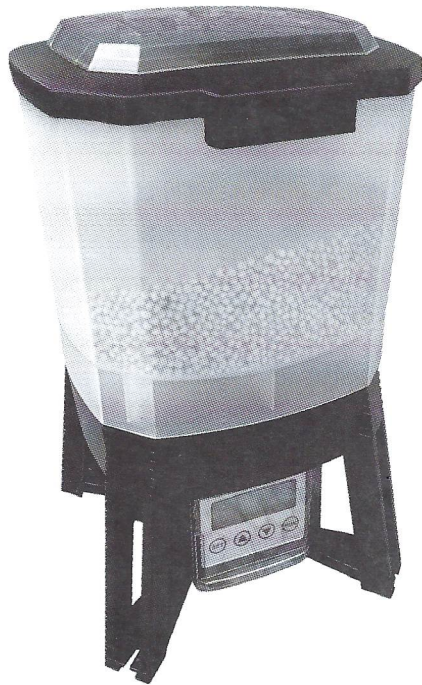

AUTOMATIC SOLAR CHARGING -  
BUILT IN 2200mA LITHIUM BATTERY

PROGRAMMABLE - FEED UP TO  
SIX TIMES PER DAY

120° WIDE FEEDING ANGLE

ADJUSTABLE - SET FEEDING  
DISTANCE AND DURATION

DIGITAL - CLEAR & ACCURATE  
DISPLAY

6 LITRE CAPACITY

To ensure your automatic feeder is set up and running correctly, and to prevent any accidental damage or injury, please read and follow the below instructions carefully before using your product.

## SAFETY

**IMPORTANT! Do not attempt to modify this unit in any way and only use the recommended parts for replacement.**

- When charging the battery using the optional 12V adapter (available to purchase separately), keep the unit out of the rain and away from combustible/explosive materials.
- When not in use for a long time, please charge the built-in battery for three hours every six months to maintain its lifespan.
- Always install at the side of a pond, never in the pond.
- Avoid exposure to direct sun.
- The unit is equipped with adapter charging socket (optional 12V adapter can be purchased separately).
- Do not connect to any voltage other than that stated.
- Do not use this unit if it is malfunctioning or if it is dropped or damaged in any manner.
- Do not attempt to modify this unit in any way. Only use attachments and the recommended parts for replacement recommended by the manufacturer.
- To avoid injury, do not touch hot or moving parts such as, but not limited to impellers.
- If the appliance shows any signs of water leakage consult the retailer where you purchased the unit.

**Please note** – this appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, provided they are given supervision and instruction concerning use of the appliance and understand the hazards involved. Children must not play with the appliance. Any maintenance must not be made by children without supervision.

## INSTALLATION & USE

Please read the below instructions carefully before beginning to set up your feeder.

1. Attach the fixing pegs to the feeder and secure it at the edge of your pond. (Fig. 1)
2. Alternatively, secure the feeder to the hard surface with screws. (Fig. 2)

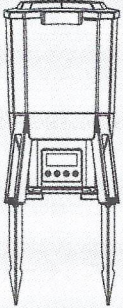


Figure 1


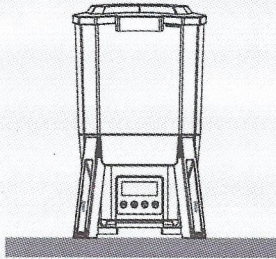


Figure 2



**Power 'On' Button (& Mains Adapter Socket) positioned on opposite side of unit to LCD as shown**

3. Use the control panel to set up your feeder.

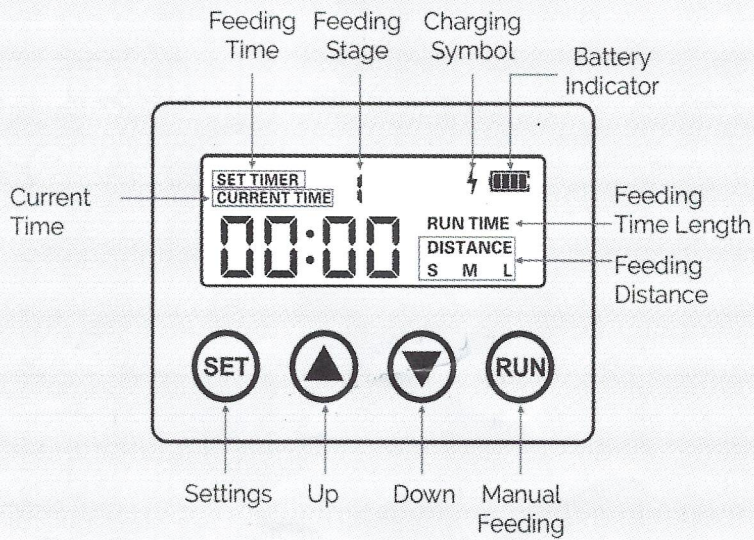

**Settings:** press shortly to change between the modes.

**Current Time:** press shortly to adjust the displayed current time.

**Feeding Time:** set the feeding start time.

**Feeding Time Length:** you can set feeding time between 0-20 seconds.

**Feeding Distance:** this sets the distance that the food is propelled. Choose between "S" (small range feeding), "M" (medium range feeding) and "L" (large range feeding). For example 6mm Koi pellets would have the following approximate distance at:

- "S" - 1 metre, motor speed is 60%
- "M" - 2 metres, motor speed is 80%
- "L" - 3 metres, motor speed is 100%

**Feeding Stage:** you can have up to six feedings per day. Each lasting up to 20 seconds.


**Manual Feeding:** press for 3 seconds and food will be propelled for that duration.

**Charging Symbol:** it blinks when unit's being charged.

#### 4. Initial Set Up


Turn on the external power switch. Press the SET button to enter the current hour. Short press the SET button again and enter the current minutes.

Use the UP and DOWN buttons to increase and decrease the number.

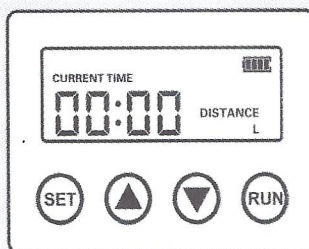


Short press SET button again and choose the feeding distance. Switch between the feeding distances using UP/DOWN buttons.

Set the feeding stages (6 to set up). Short press SET button and set the time by pressing UP/DOWN buttons.

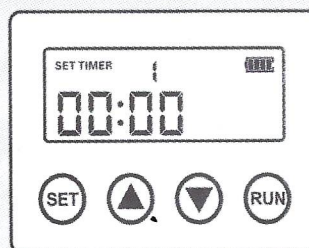

Set the feeding time lengths (0 to 20 seconds).  
Short press UP/DOWN buttons to set the length. 0 seconds means no feeding at this stage.

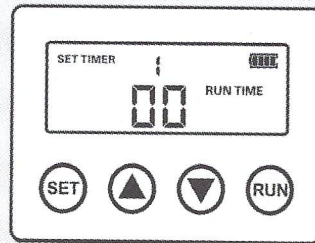

## MAINTENANCE

To ensure optimal performance and that your unit functions correctly, regular maintenance is essential. Failure to do so may result in damage to your unit and may invalidate your warranty.

Depending on the type of food you use, the feeding operation might create some dust. Use a dry cloth to remove food residue.

## TROUBLESHOOTING

### My Display is Not Working

1. Make sure your unit is charged. Place it in a sunny spot for charging or use a 12V adapter (available to buy separately).
2. Ensure the external switch is on.

### My Display is Working But No Food Comes Out

This happens when the impeller gets stuck. Locate the impeller and inspect for damage and clear the fittings and parts of any waste build-up.

Ensure the impeller is intact - it has not come apart or split. If this is the case you need to replace your impeller.

### The Impeller Rotates But No Food Comes Out

Ensure the food placed in the container is not lumpy otherwise it won't be able to be propelled and you'll need to mash it up.

## How Do I Choose The Correct Amount of Food?


You can check how much food will be propelled by following the steps below:

1. Set the timer's feeding time to feed in about two minute's time.
2. Hold an empty bucket in front of the chute and check amount of food that comes out.
3. Adjust the feeding time (see the installation & use section).

## SPECIFICATIONS

<b>MODEL:</b>	<b>PXFF0010</b>
<b>FISH FOOD SIZE:</b>	<b>3-10mm</b>
<b>CAPACITY:</b>	<b>6L</b>
<b>FEEDING TIMES PER DAY:</b>	<b>1-6</b>
<b>BATTERY CAPACITY:</b>	<b>2200mA</b>
<b>DIMENSIONS (LxWxH) (mm):</b>	<b>275 x 252 x 420</b>
<b>ADAPTER SPECIFICATIONS:</b>	<b>12V 1.66A</b>

# PARTS DIAGRAM

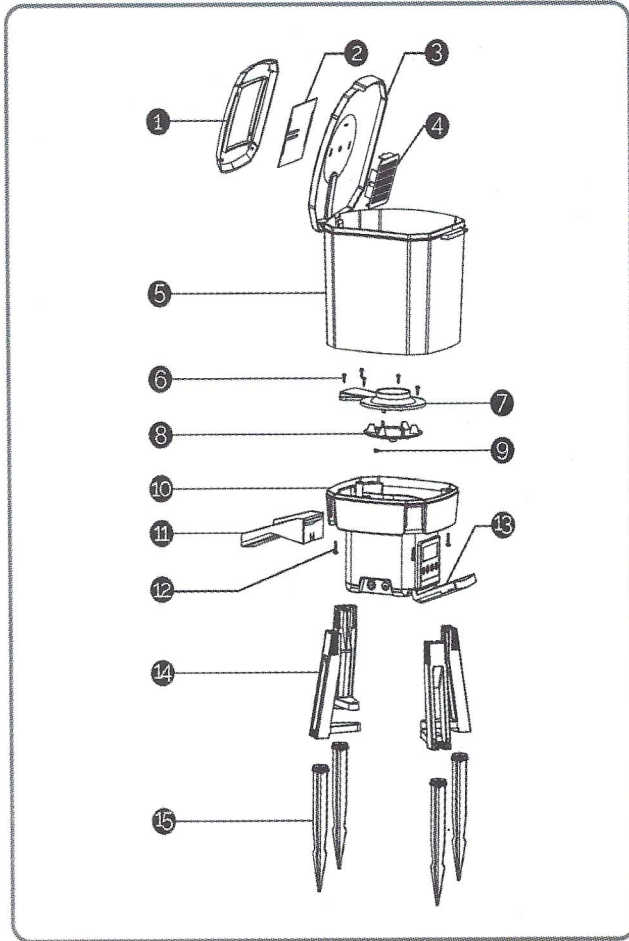


1	TRANSPARENT COVER	6	SCREW 1	11	FEEDING CHUTE
2	SOLAR PANEL	7	IMPELLER COVER	12	SCREW 3
3	BUCKET COVER	8	IMPELLER	13	PROTECTIVE COVER
4	DESICCANT RACK	9	SCREW 2	14	LEGS
5	FOOD CONTAINER	10	MAIN BODY	15	FIXING PEGS

## WARRANTY

 This product is guaranteed for a period of 24 months from the date of purchase for material or manufacturing defects. The guarantee covers the substitution of defective parts. However, the guarantee is considered null and void in the case of improper use, improper handling or negligence on the part of the buyer. If your PondXpert Feeder fails please take it back to the retail outlet from where it was purchased. You will be required to take your receipt/proof of purchase with you. This does not affect your statutory rights.



Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point.

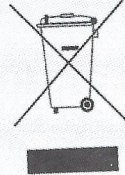

PondXpert  
A3 Bentley Avenue  
Billingham  
TS23 4BU  
UK  
01642 370898  
[www.pondxpert.co.uk](http://www.pondxpert.co.uk)