



Installing Your New Roof

Supplied with one-piece of EPDM rubber membrane this kit couldn't be easier to install!

PERFECT FOR:

- ✚ Sheds and Summerhouses
- ✚ Office Rooms and Cabins
- ✚ Play Houses and Dens
- ✚ Bike and Garden Storage

Fitting Instructions for Shed Roofs




1 Remove old roof covering and nails. Re-board if roof is rotten or roofing felt doesn't come off cleanly.



2 Apply the rubber membrane by laying it in position on the roof for 20 – 60 minutes. Fold the membrane back to the centre of the roof ready for adhesive.



3 Apply the adhesive to the entire roof working 'in stages'. Roll the membrane gradually onto the adhesive whilst wet.

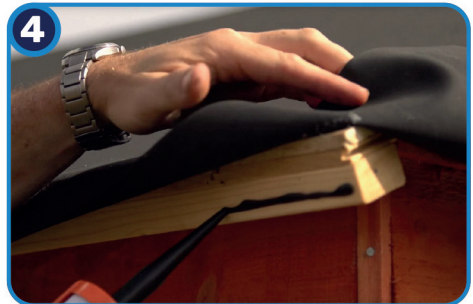

4 Apply a bead of edge sealant and press the membrane onto it. Once dried this will hold the membrane securely.



5 Reinstall any existing timber barge boards to help secure the membrane perimeter. Replace if rotten.



6 Remove any excess membrane using scissors. If an edge trim is used, install this first then use the underside of the trim as a guide to cut the membrane.